


# Solderless Artisan Installation

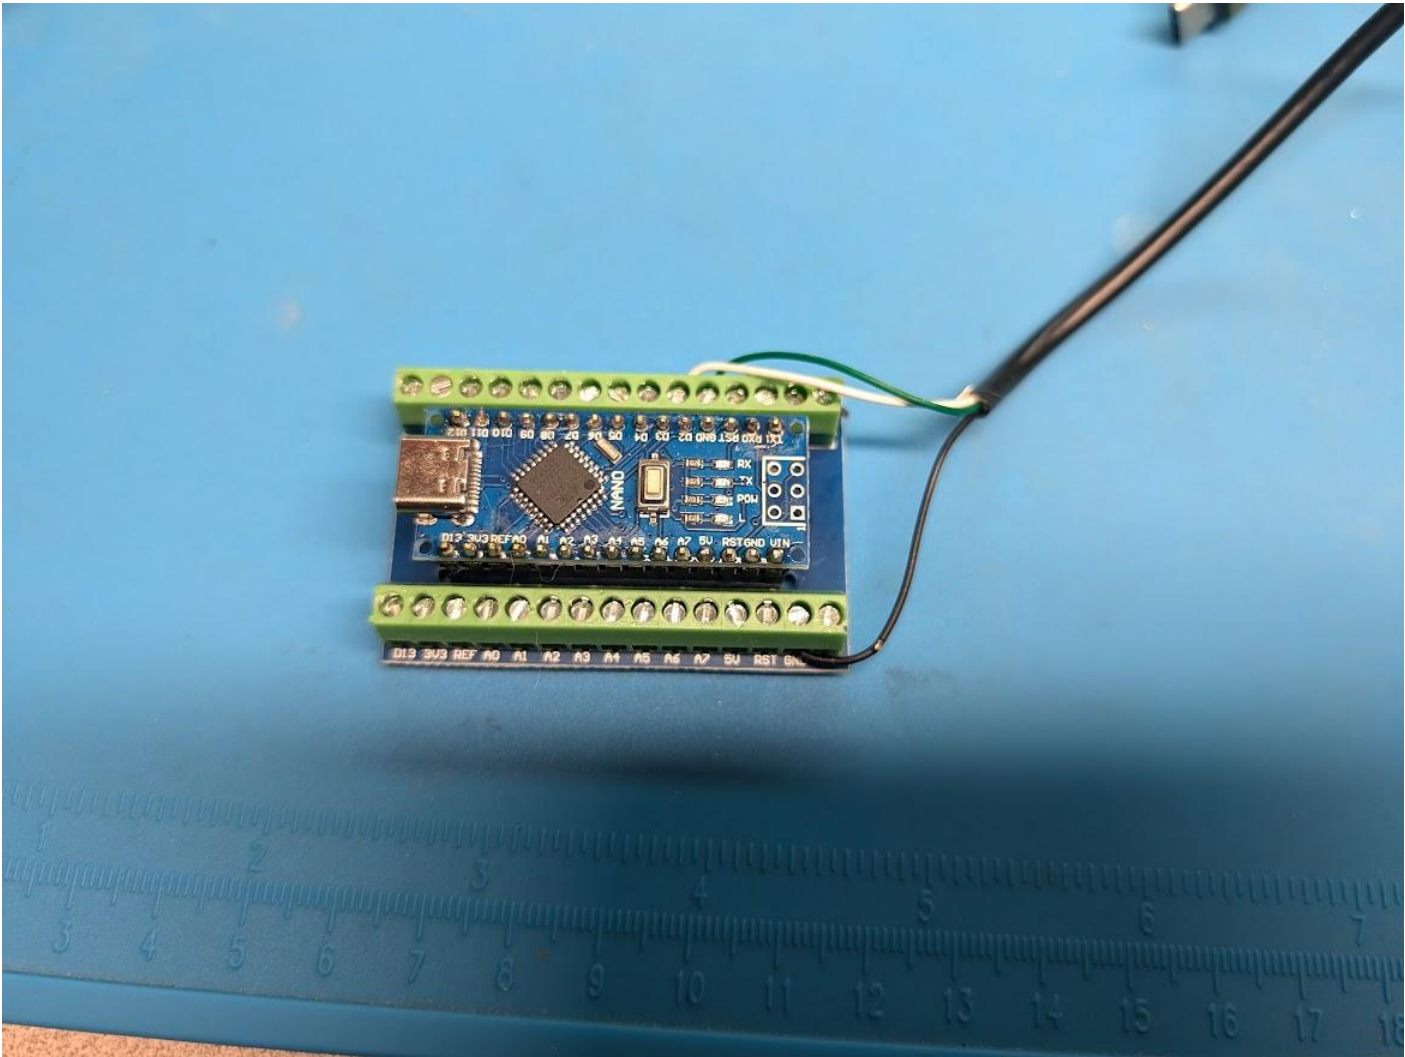

BOM	QTY
<a href="#">Arduino Nano</a>	1
<a href="#">Arduino Nano Terminal</a>	1
<a href="#">USB Cable</a>	1


--	--

Follow these instructions:

[Skycommand](#)

[Install Video](#)

[Livestream Install](#)

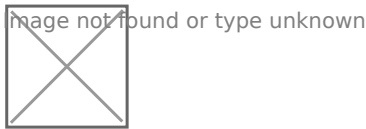

---

Revision #2  
Created 5 September 2024 21:25:40 by Nirecue  
Updated 5 September 2024 21:39:25 by Nirecue