


# Solderless Artisan Installation

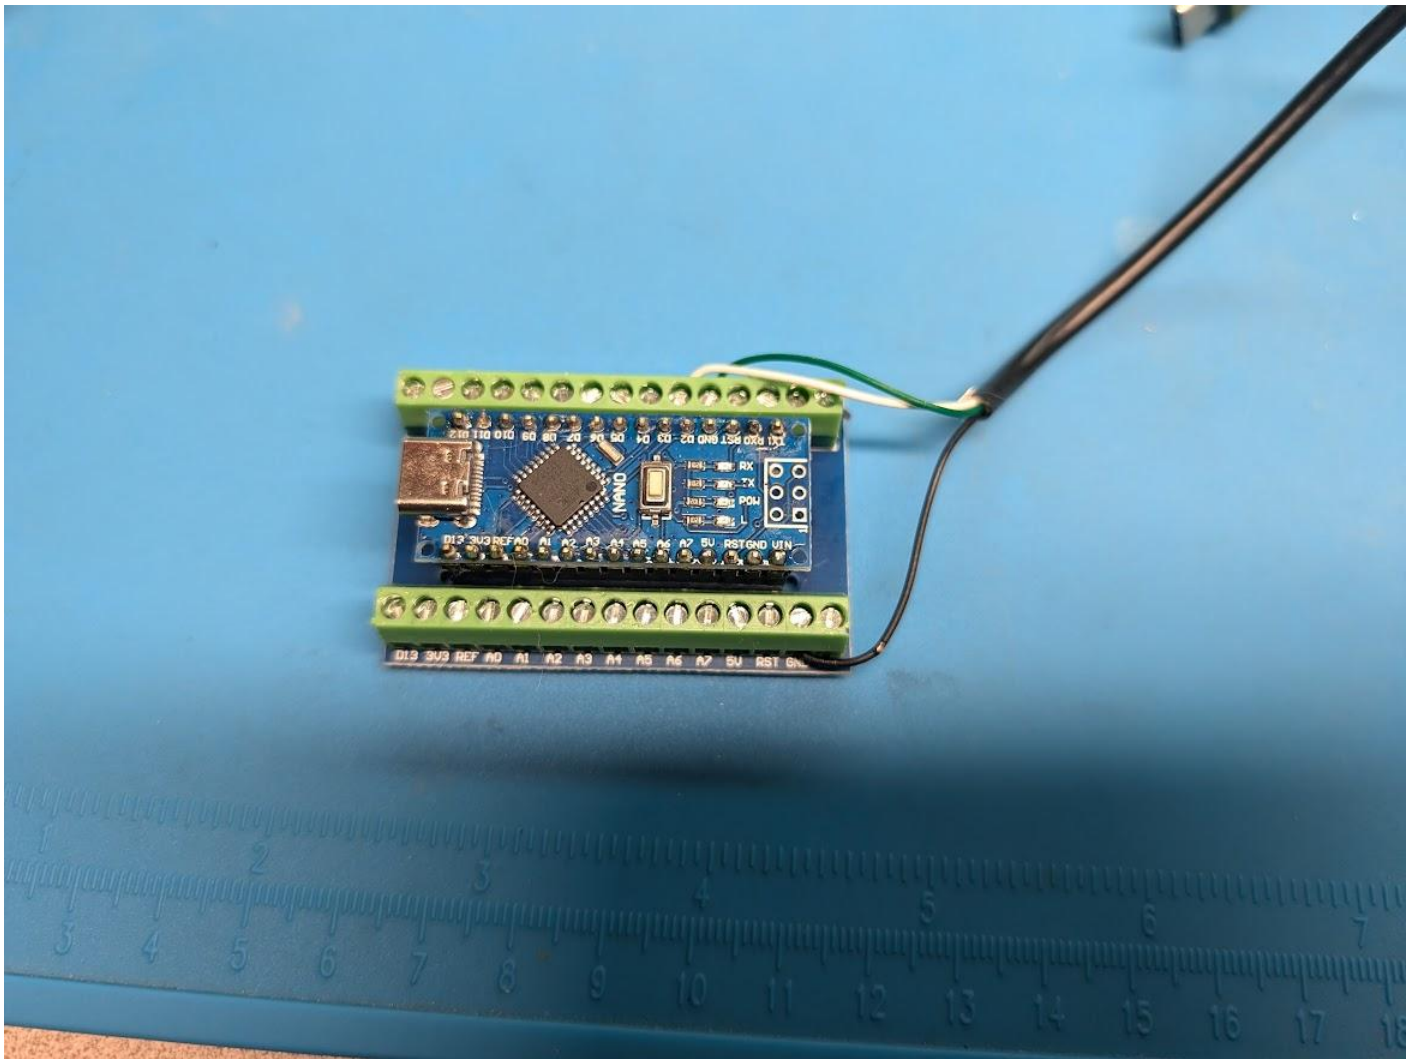

BOM	QTY
<u>Arduino Nano</u>	1
<u>Arduino Nano Terminal</u>	1
<u>USB Cable</u>	1

--	--

Follow these instructions:

[Skycommand](#)

[Install Video](#)

[Livestream Install](#)



---

Revision #2  
Created 5 September 2024 21:25:40 by Nirecue  
Updated 5 September 2024 21:39:25 by Nirecue