


Solderless Artisan Installation

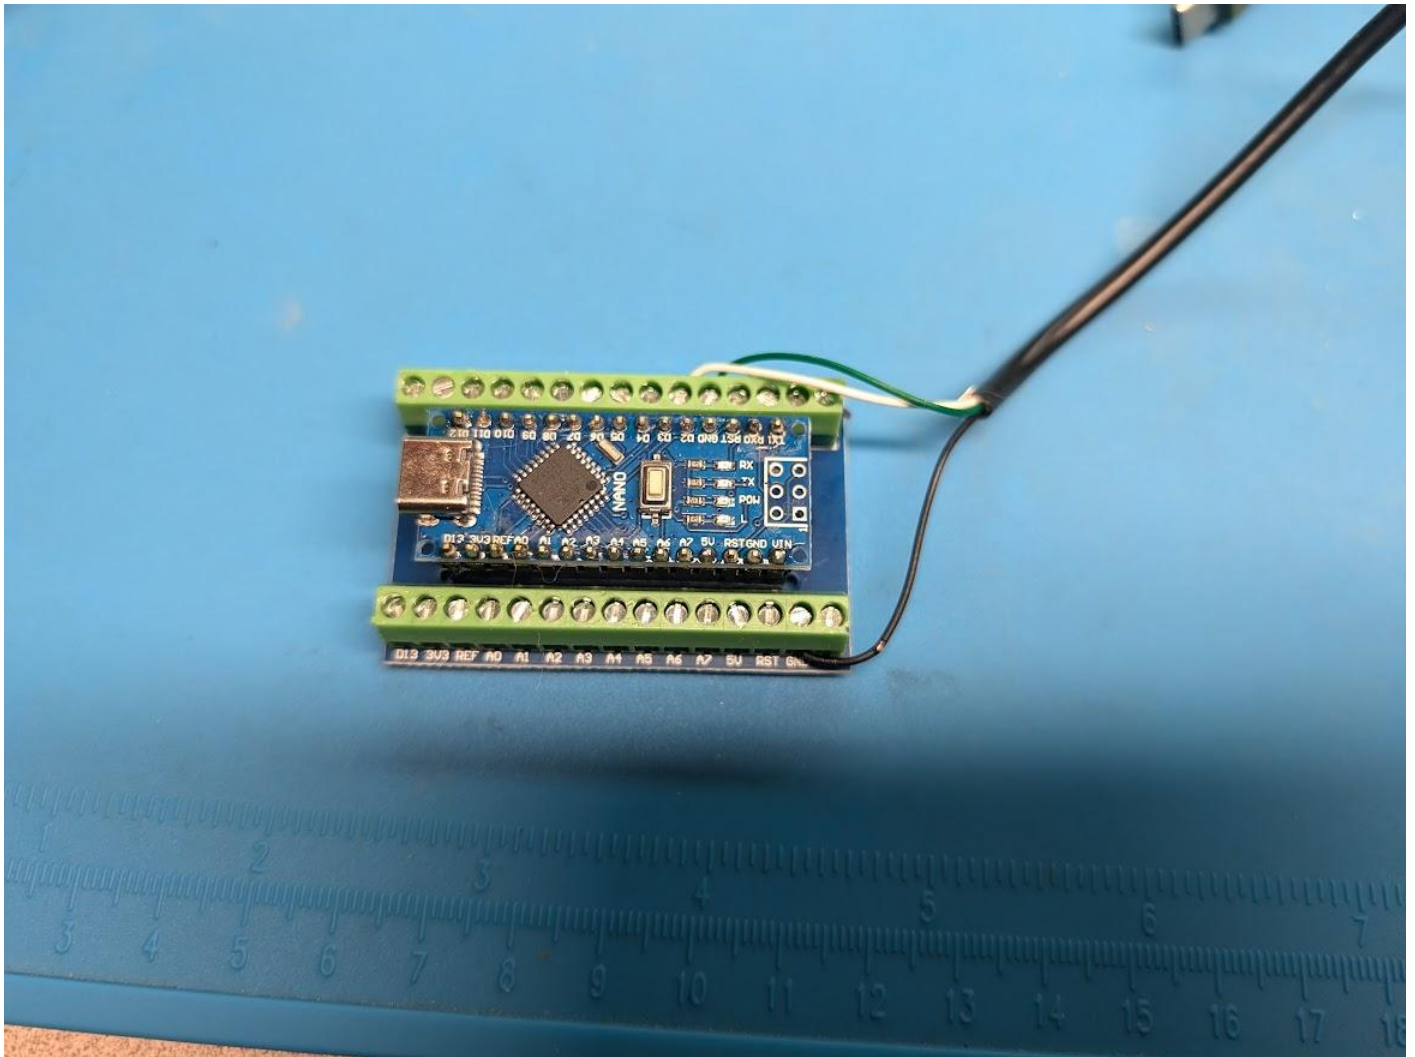

BOM	QTY
Arduino Nano	1
Arduino Nano Terminal	1
USB Cable	1

--	--

Follow these instructions:

[Skycommand](#)

[Install Video](#)

[Livestream Install](#)

loading.gif

Revision #2

Created 2024-09-05 21:25:40 UTC by Nirecue

Updated 2024-09-05 21:39:25 UTC by Nirecue